



# ASSEMBLY INSTRUCTIONS

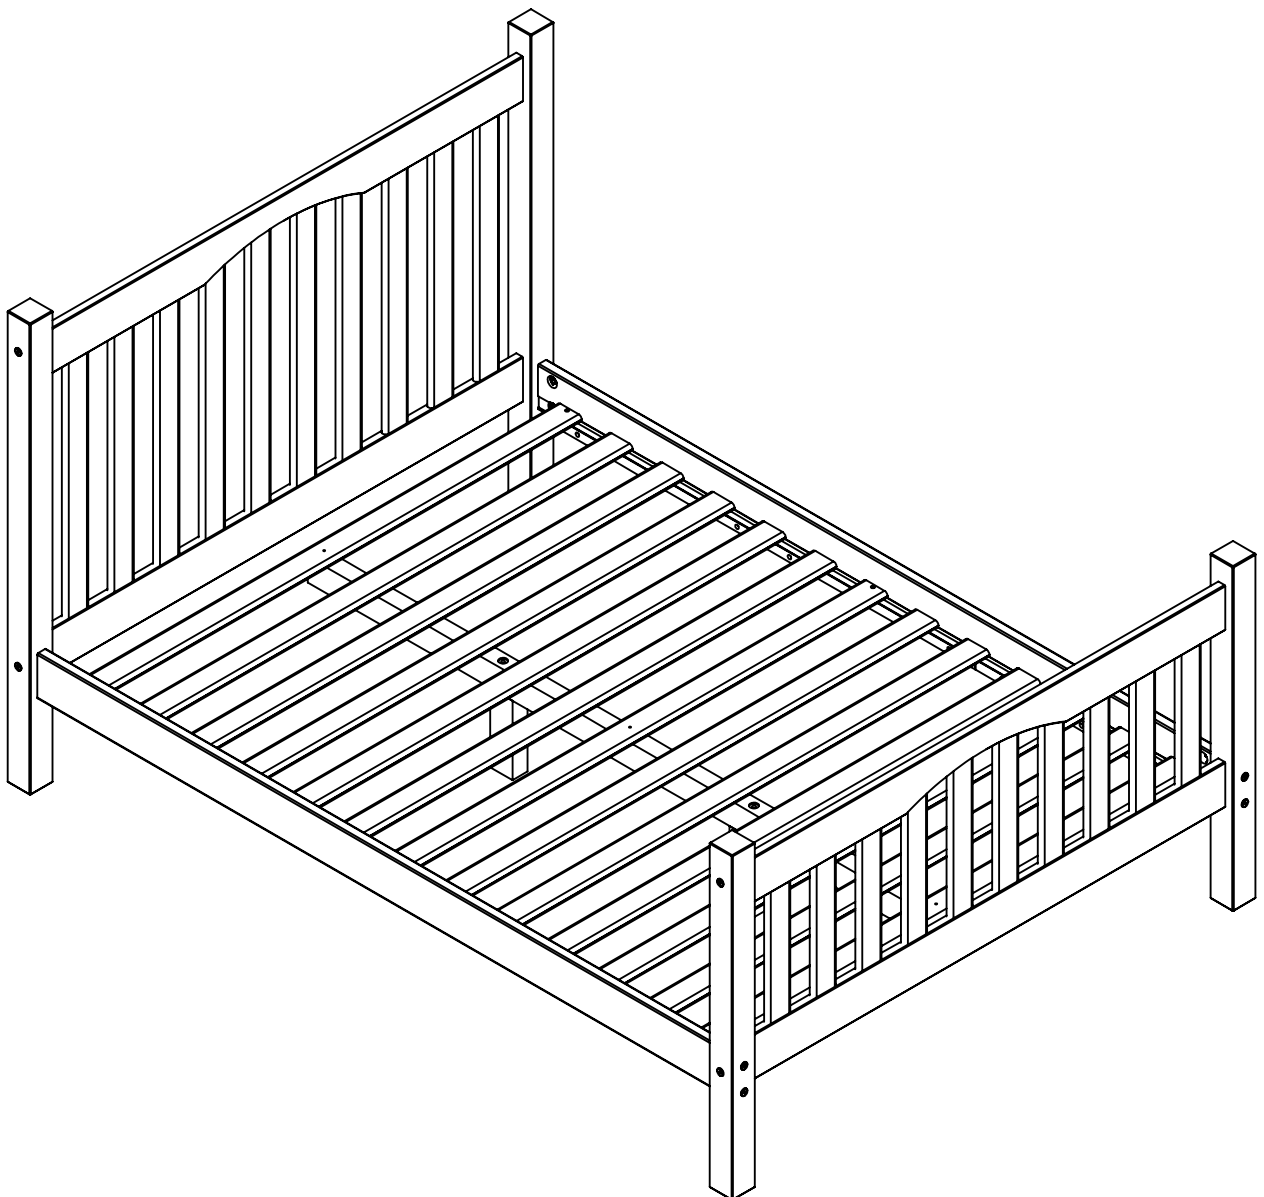



## FULL MISSION BED






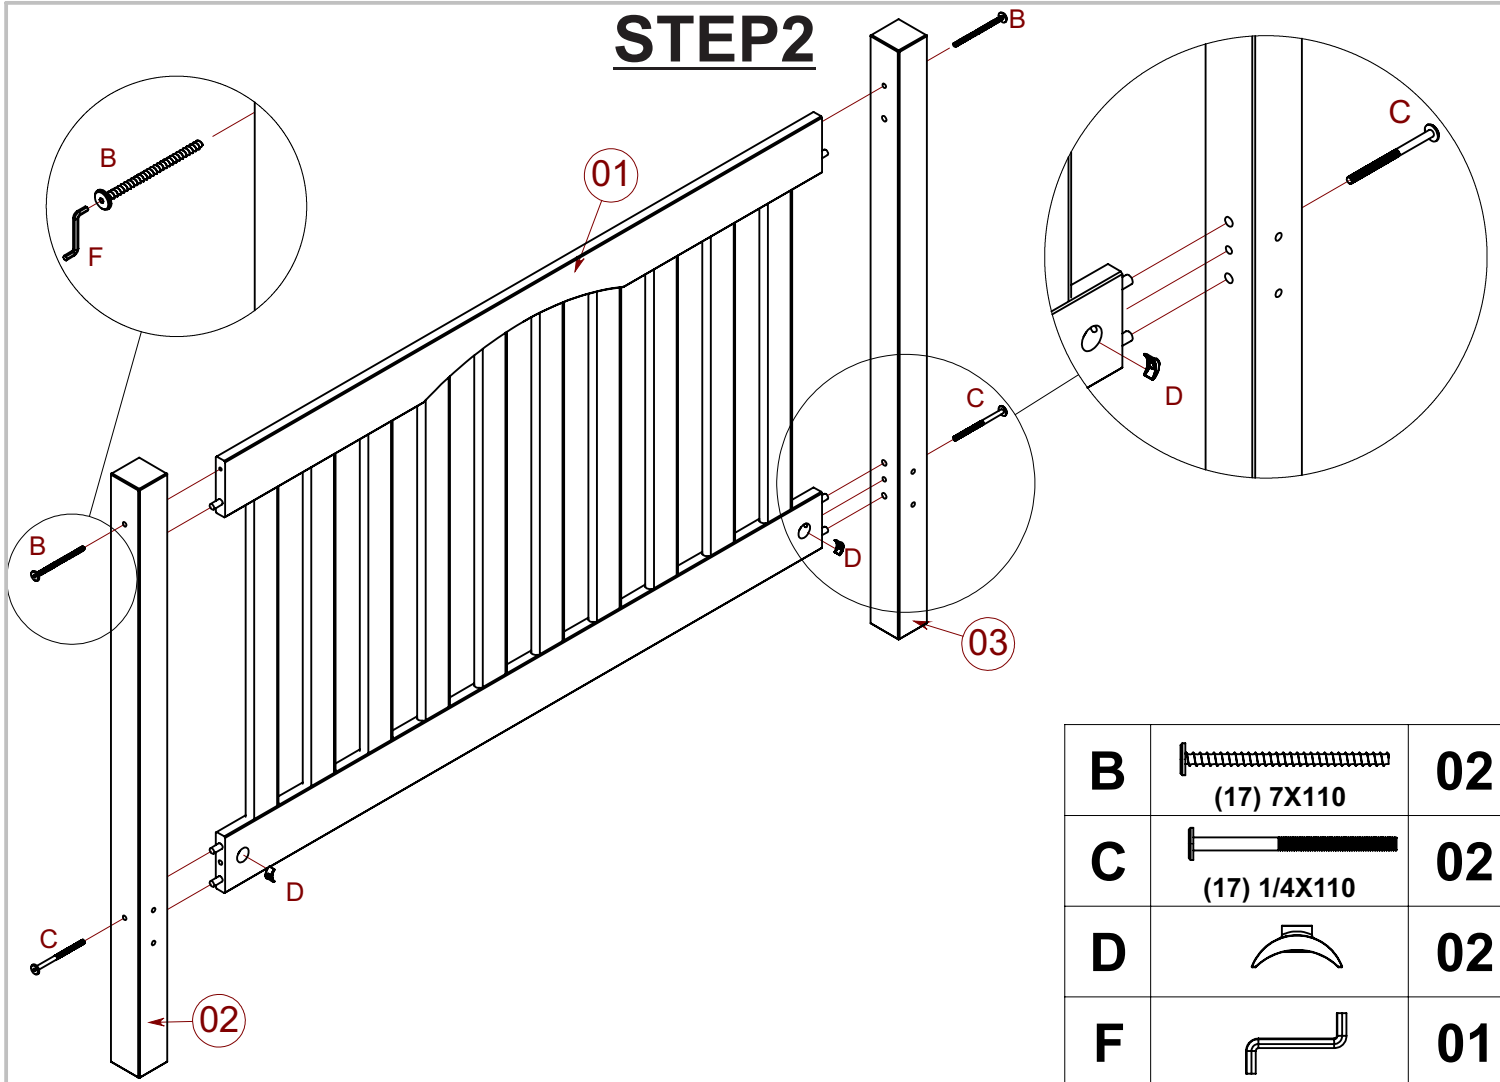



## STEP 2



<b>B</b>	 (17) 7X110	<b>02</b>
<b>C</b>	 (17) 1/4X110	<b>02</b>
<b>D</b>		<b>02</b>
<b>F</b>		<b>01</b>
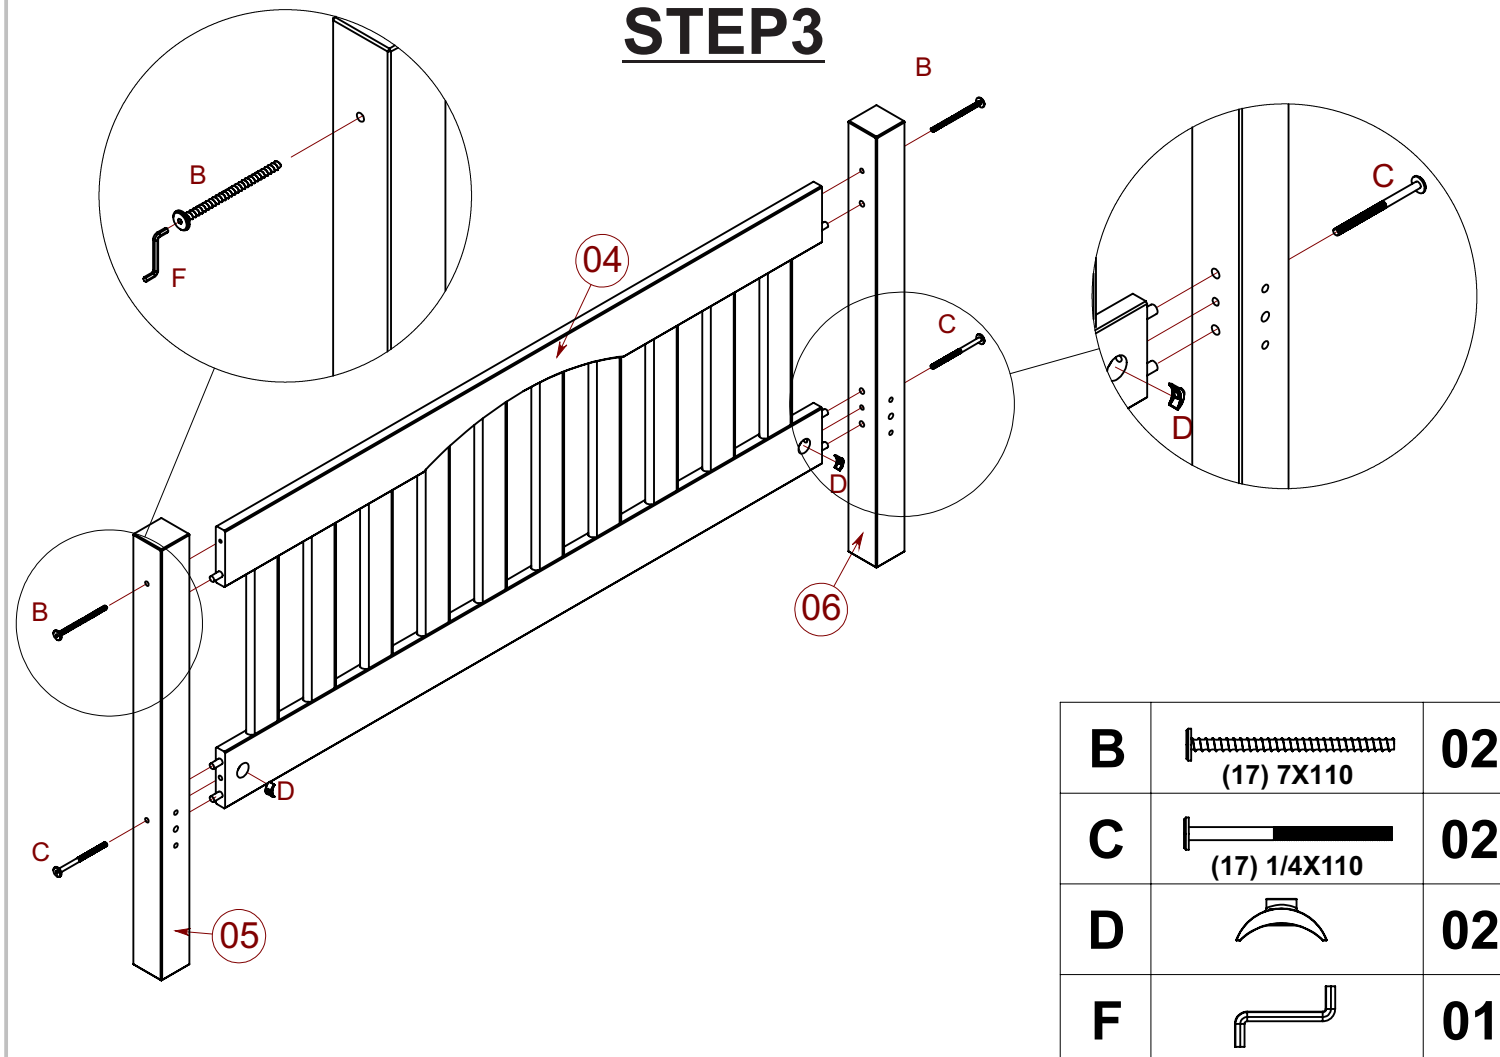
## STEP 3



<b>B</b>	 (17) 7X110	<b>02</b>
<b>C</b>	 (17) 1/4X110	<b>02</b>
<b>D</b>		<b>02</b>
<b>F</b>		<b>01</b>

