



ASSEMBLY INSTRUCTIONS

FULL BARCELONA BED

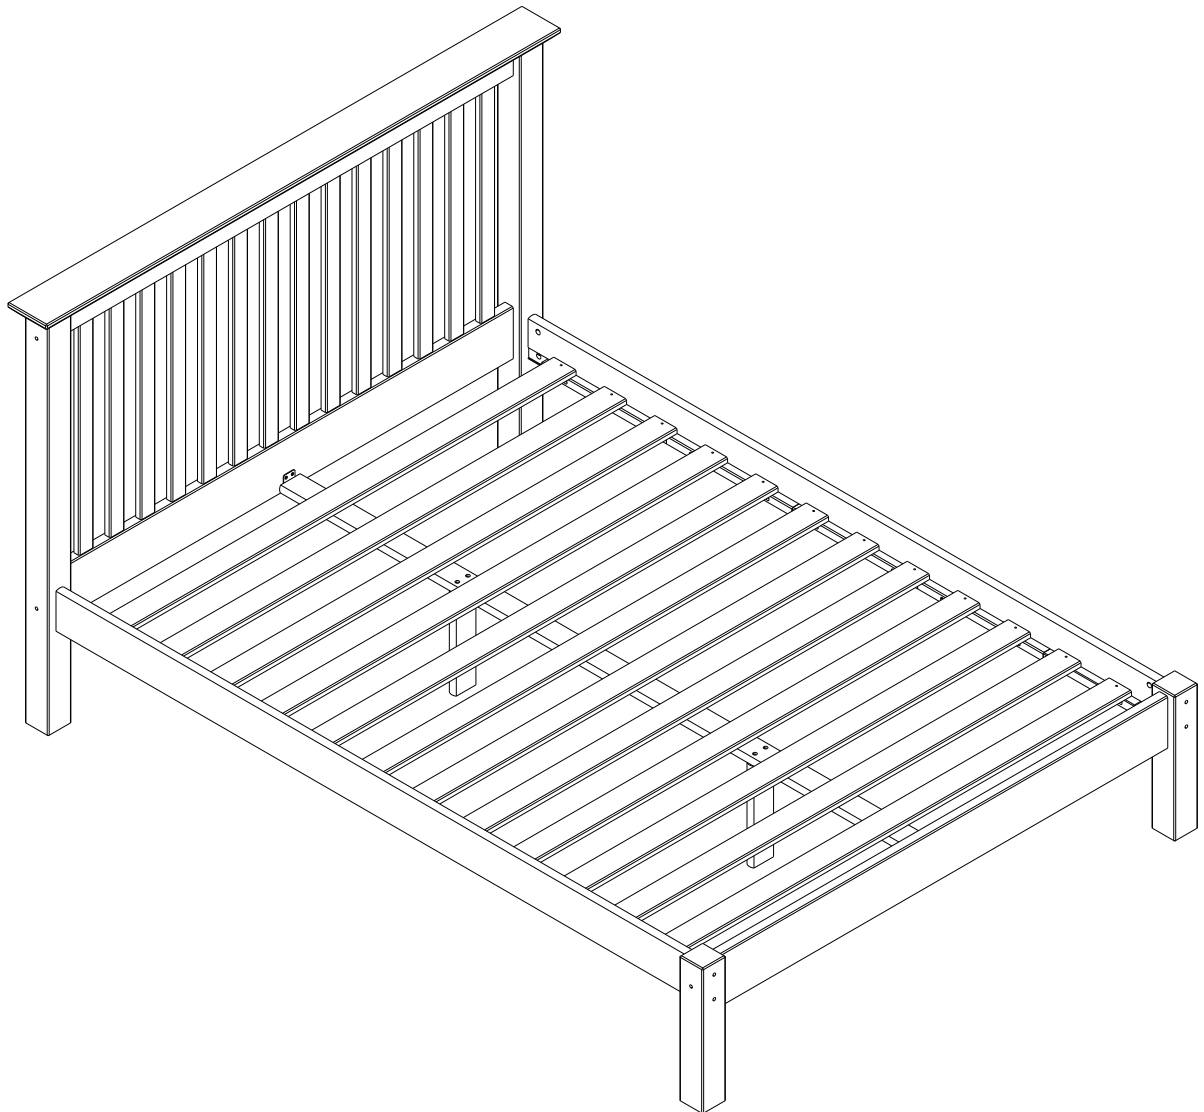


REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at "alaterrefurniture.com"

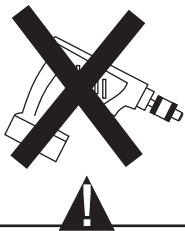


* Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

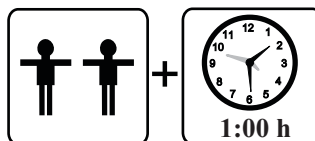

Tools Required




(Not included)














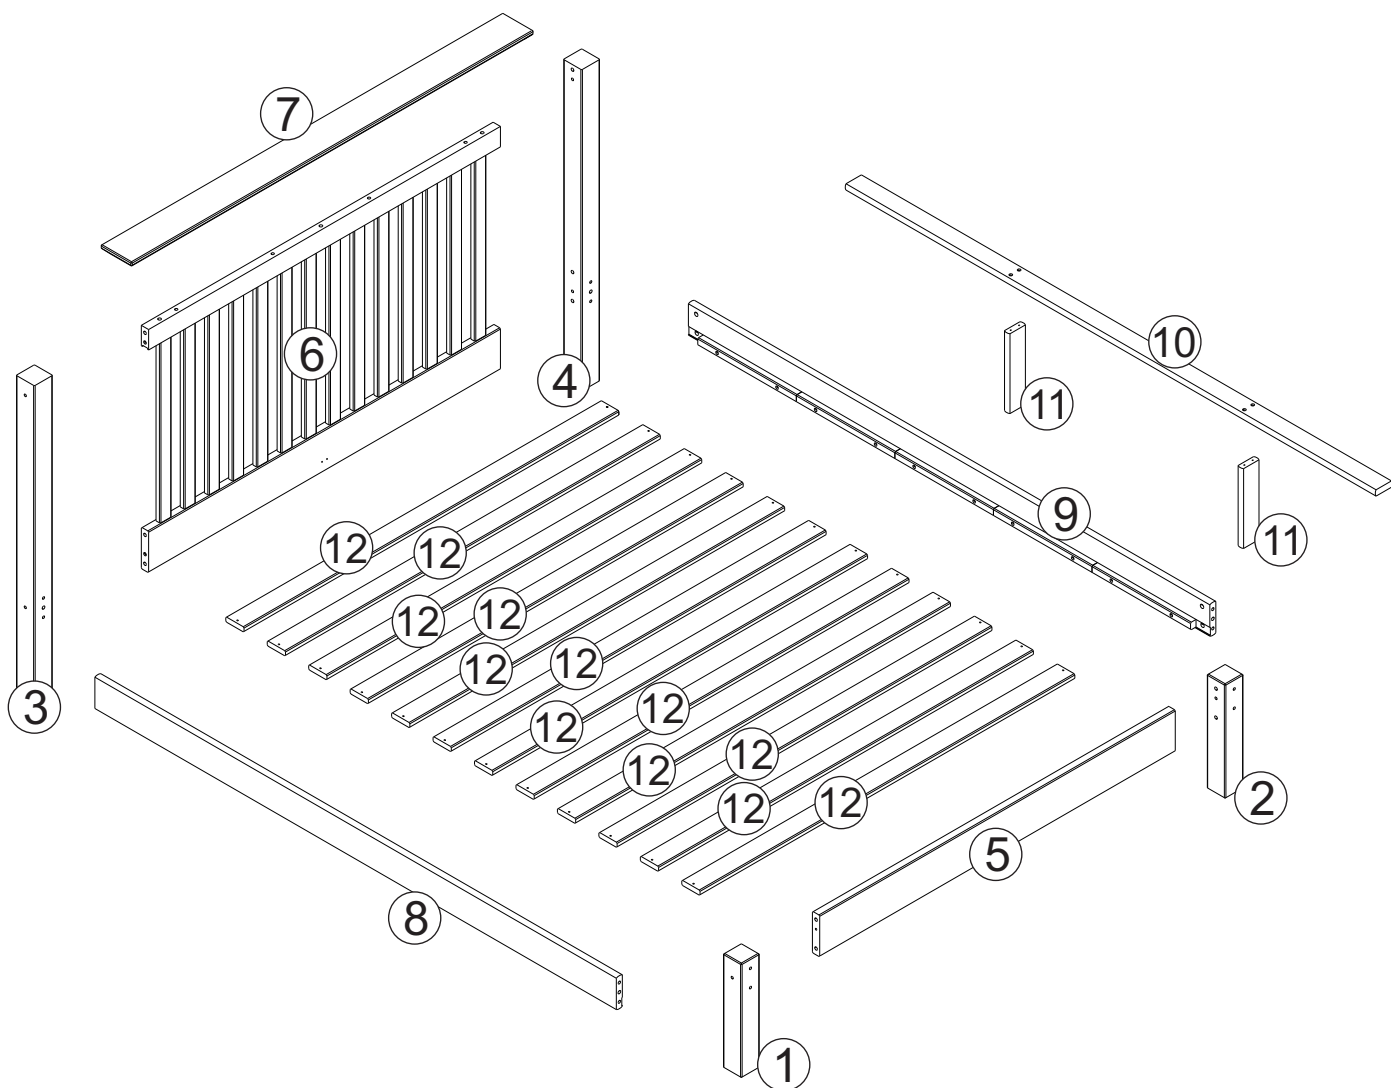


(Not included)

Part List - Full Barcelona Bed



Identifying the Hardware-Identify the hardware using the illustrations below.

<p>A   08 1/4 x 110 x 17mm</p>	<p>B   06 7 x 110 x 17mm</p>	<p>C   04 7 x 80 x 13mm</p>
<p>D  17 10X40</p>	<p>E  08 1/4</p>	<p>F  04 4,0 x 50</p>
<p>G  24 4,0 x 35</p>	<p>H  08 3,5 x 16</p>	<p>I  01</p>
<p>K  02 82mm</p>	<p>L  02</p>	


01

D




10X40

17



(Not included)

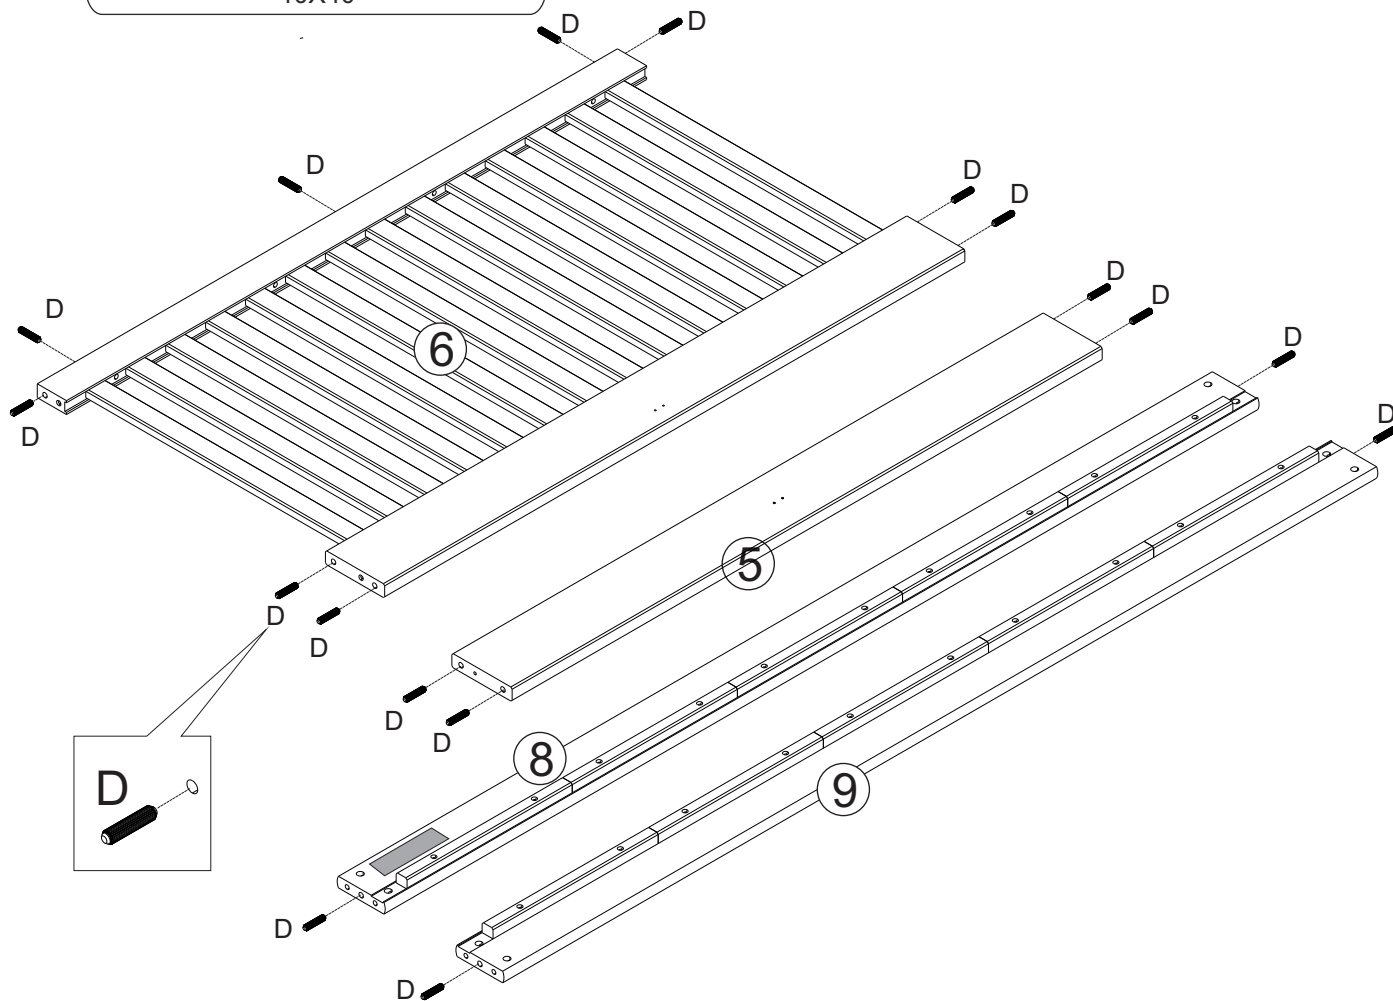

02


H





3,5 x 16

04


L





02

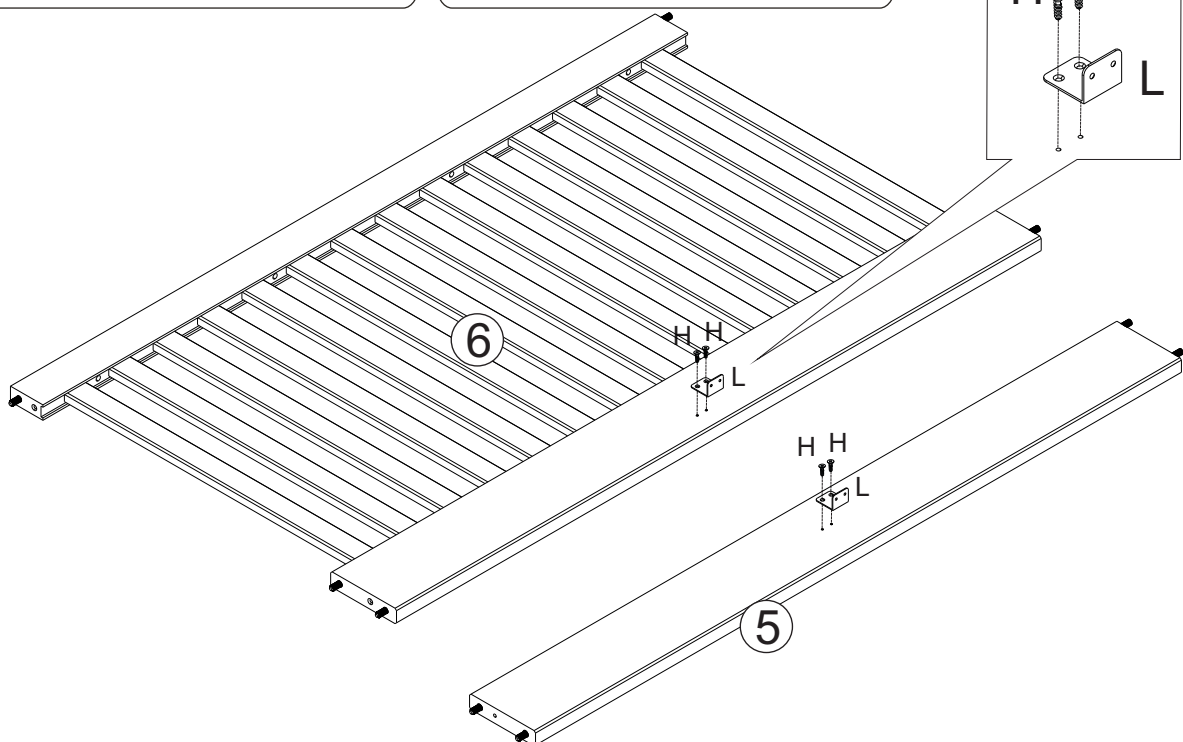


03


B  **04**
7 x 110 x 17mm



I  **01**

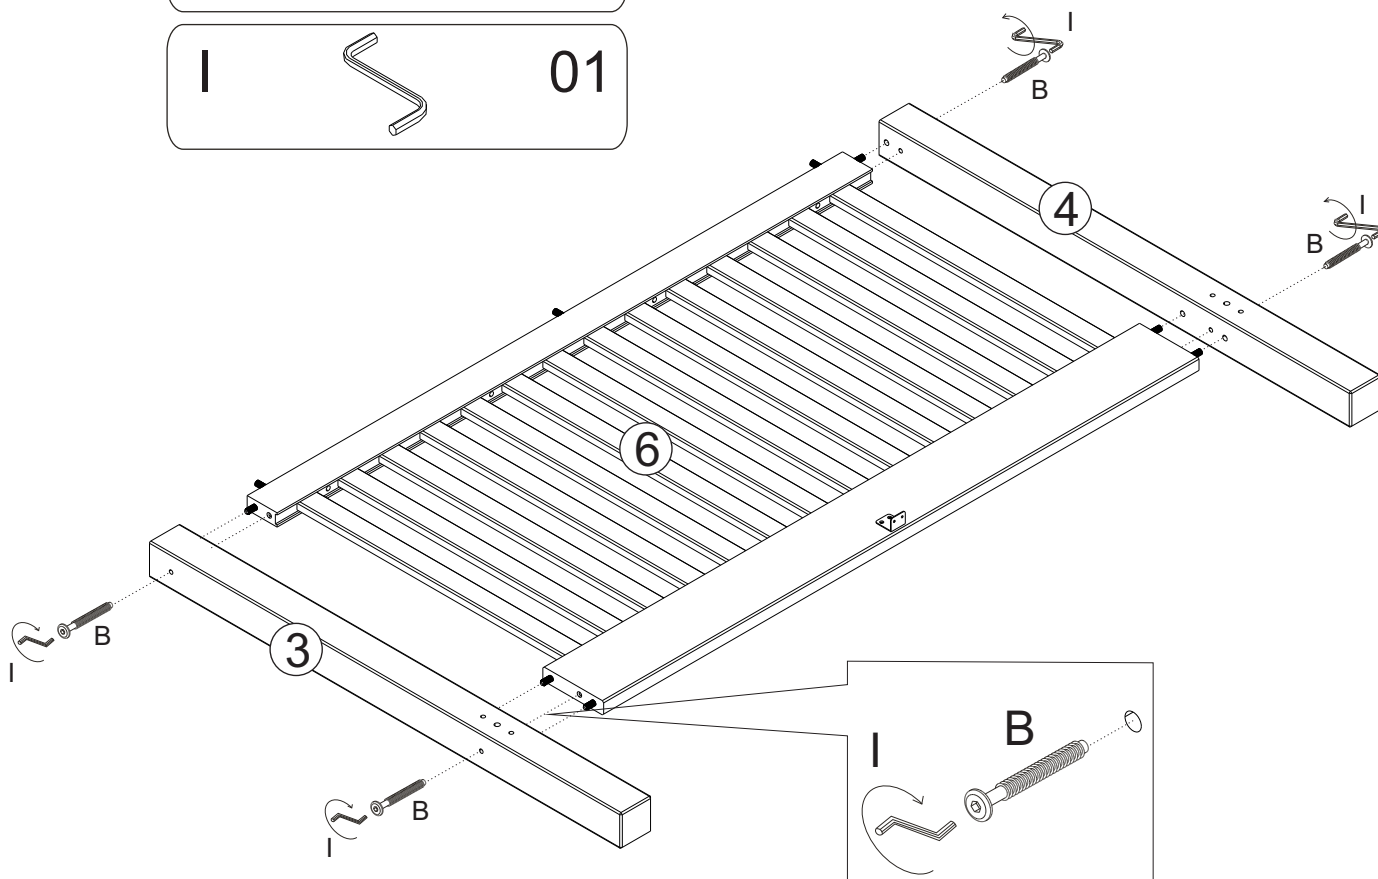


04

C  **04**
7 x 80 x 13mm




I  **01**

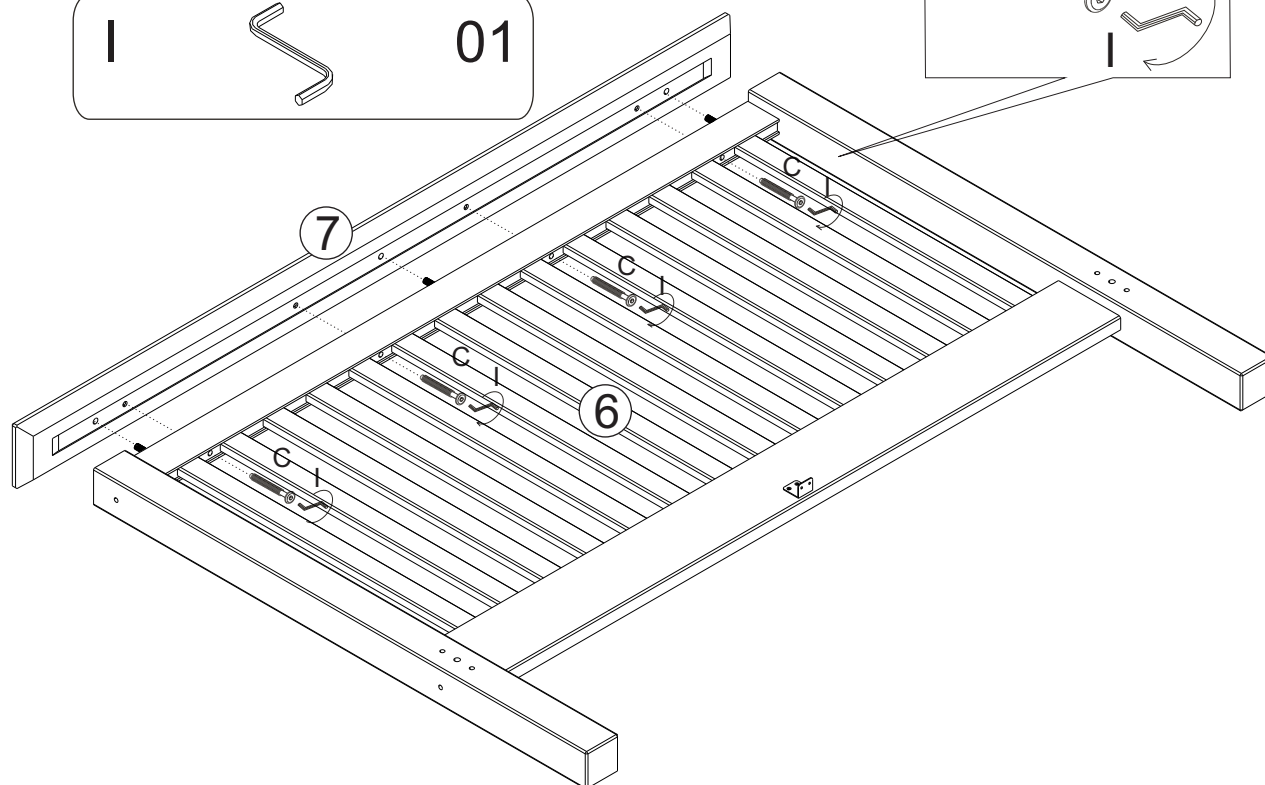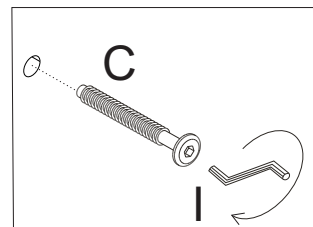

05

B


7 x 110 x 17mm

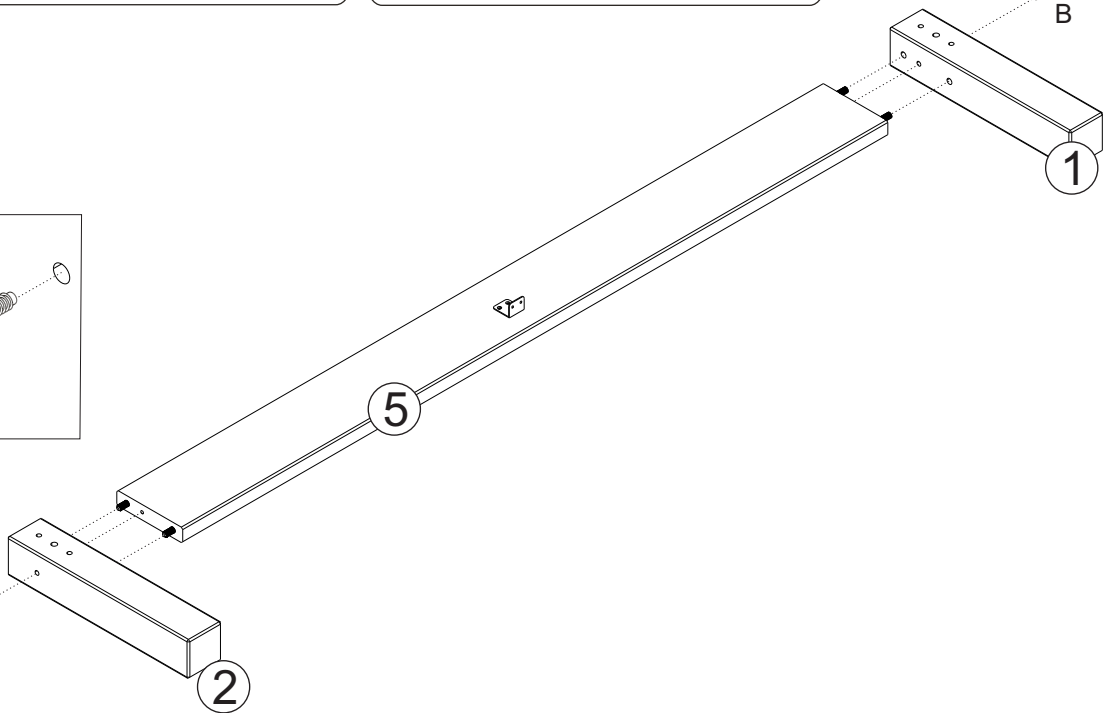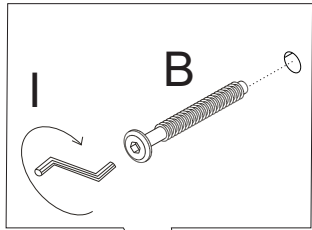02**I****01**



06

**A****08**



1/4 x 110 x 17mm



E**08**

1/4

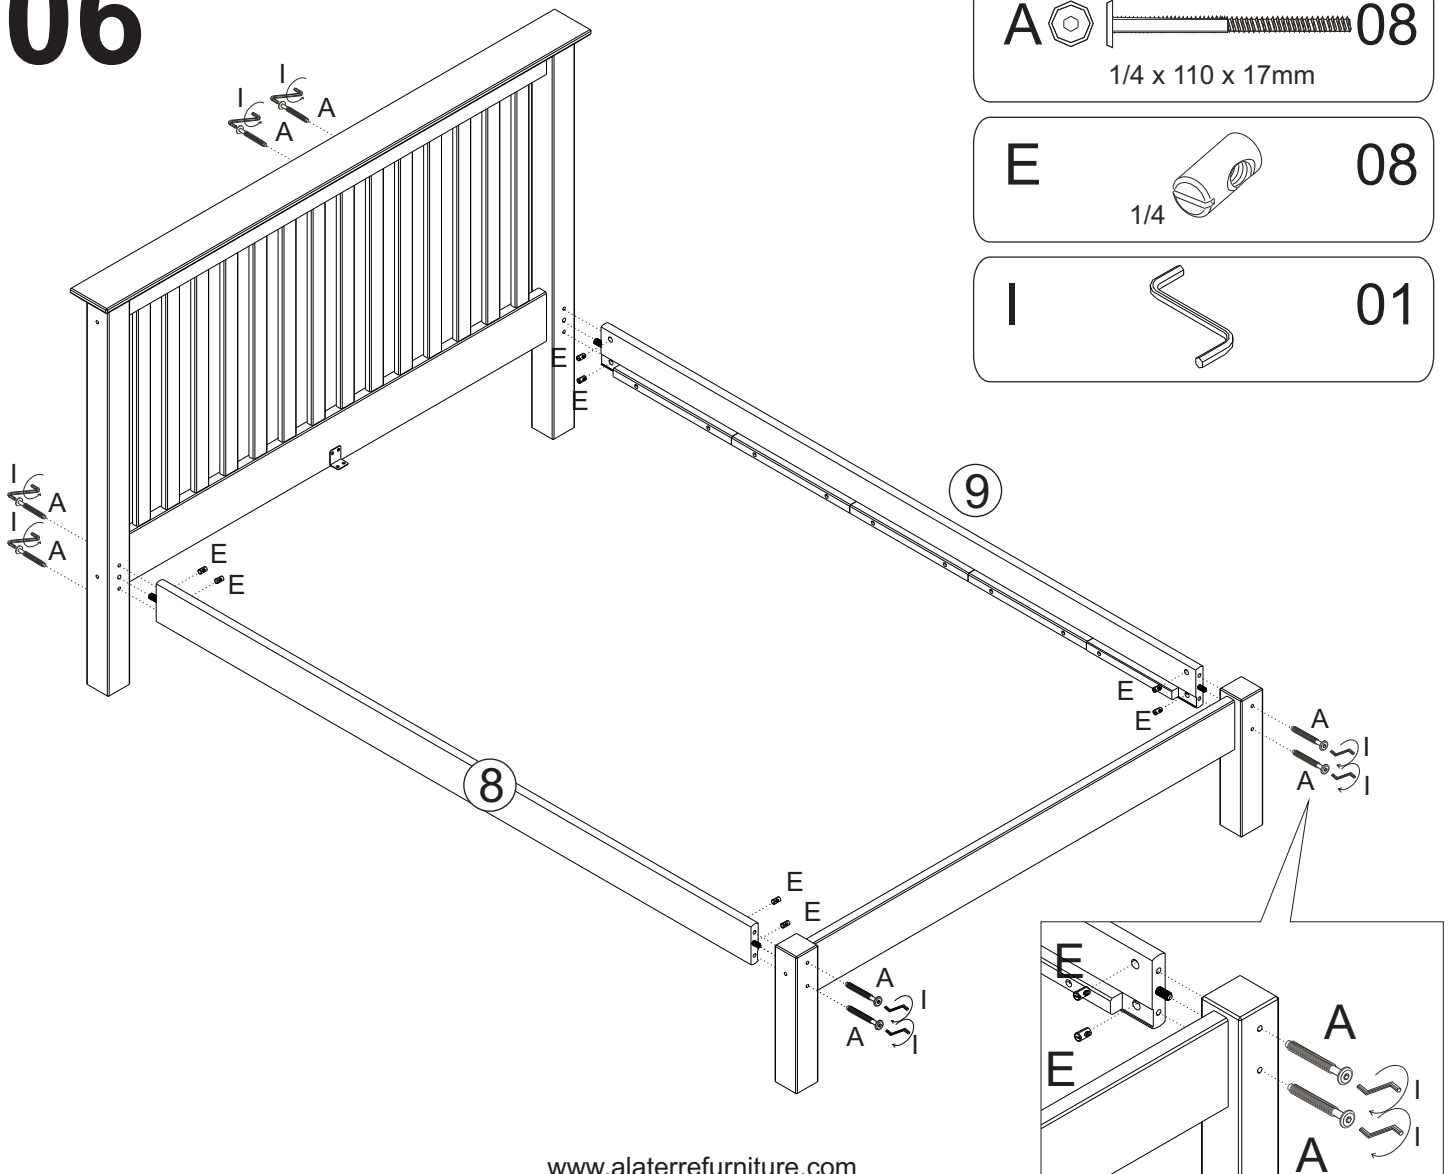

I**01**



07

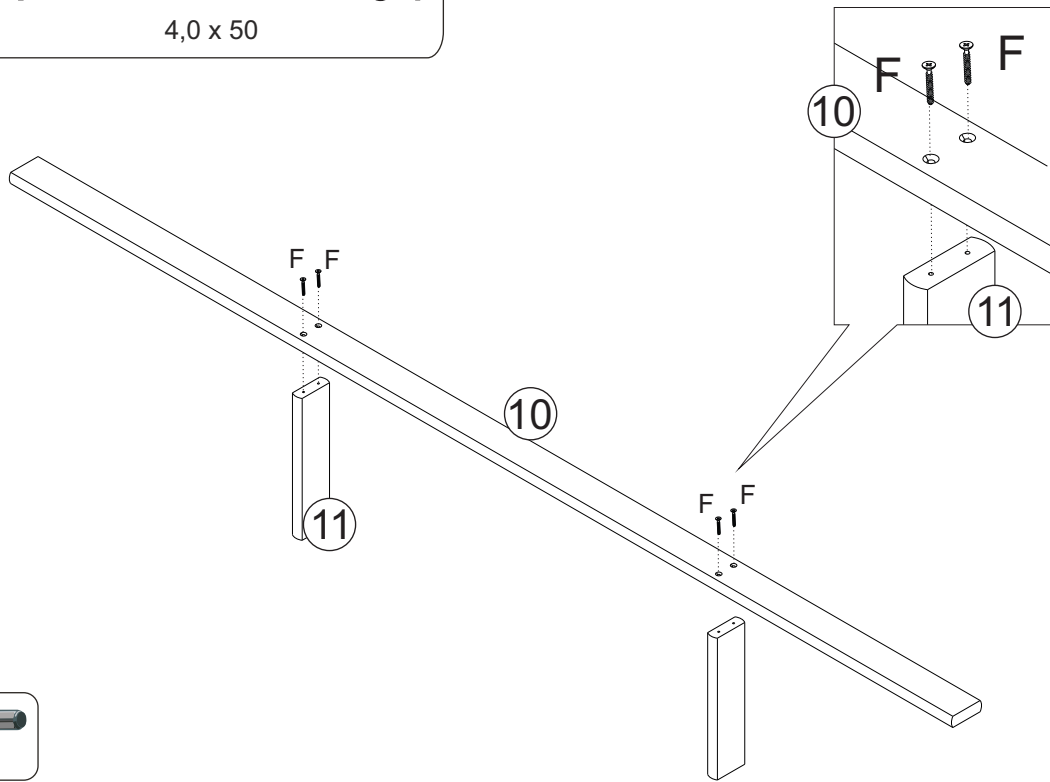F   **04**
4,0 x 50



08

H   **04**
3,5 x 16

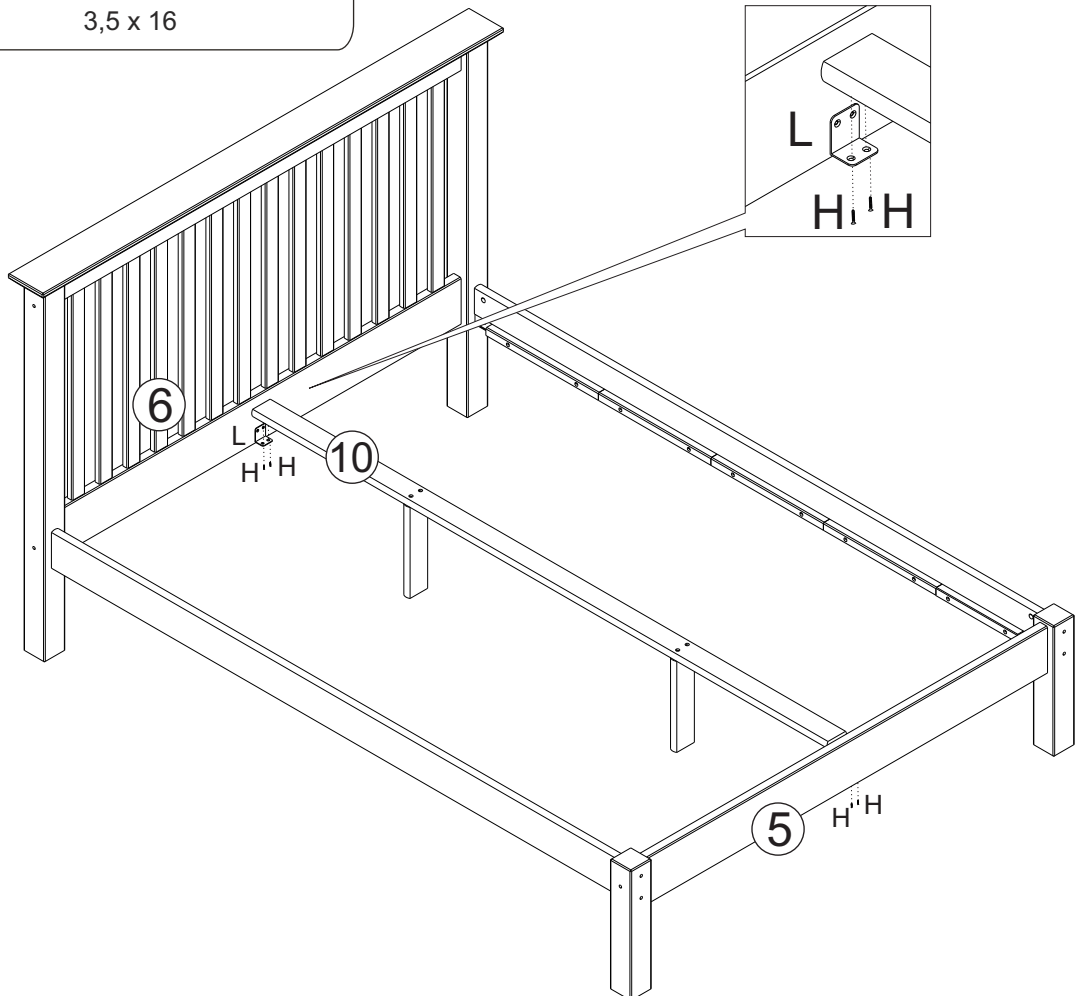

09


G



4,0 x 35

24

K



82mm

02

