





MOUNTING INSTRUCTION

NO.	DRAWING	DESCRIPTION	QTY.
A		COAT HOOK	1
B		PLASTIC ANCHOR	2
C		SCREW	2

Step 1

MEASURE THE DISTANCE BETWEEN THE TWO HOLES OF THE KEY HOLE CENTRE . THEN MARK THE SAME DISTANCE POINT ON THE WALL.

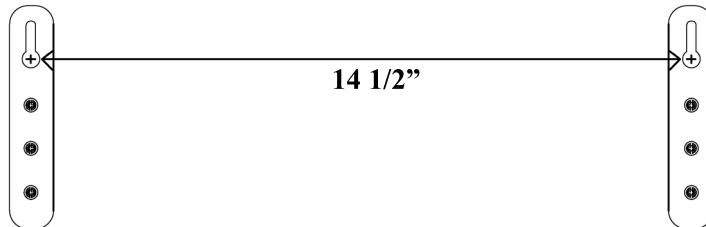


Step 2

DRILL 1/8" PILOT HOLE 2" DEEP . THIS MARKS LOCATION FOR SCREW TO HANG COAT HOOK.

Step 3


IF HOLE LOCATION IS ALIGNED WITH STUD IN WALL , SECURE THE SCREW (C) DIRECTLY INTO THE STUD .

NOTE : DO NOT DRIVE SCREW ALL THE WAY IN, HAVE HEAD OF SCREW OUT ABOUT 3/8"

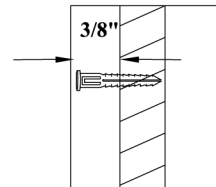

Step 4


IF HOLE LOCATIONS DOES NOT ALIGN WITH THE STUD, INSTALL THE PLASTIC ANCHOR . TAP THE PLASTIC ANCHOR (B) INTO THE DRYWALL COMPLETELY.

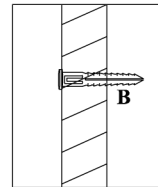

Step 5

SECURE SCREWS INTO PLASTIC ANCHOR

NOTE : DO NOT DRIVE SCREW ALL THE WAY IN , HAVE HEAD OF SCREW OUT ABOUT 3/8"

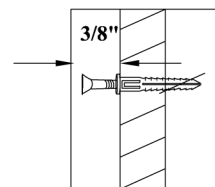

STEP 6 : HANG COAT HOOK

