
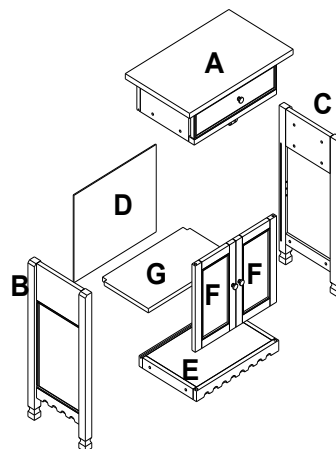


Alaterre Furniture








Country Cottage Accent Table

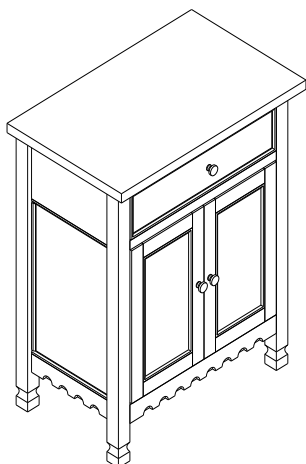









Thank you for purchasing the Country Cottage Accent Table from **ALATERRE FURNITURE**. We have found it helpful to have a second person present during the assembly process.

Accent Table Assembly Instructions

Parts

NO.	DRAWING	DESCRIPTION	QTY.
A		TOP	1
B		SIDE PANEL-R	1
C		SIDE PANEL-L	1
D		BACK PANEL	1
E		BOTTOM	1
F		DOORS	2
G		SHELF	1

NO.	DRAWING	DESCRIPTION	QTY.
H		35MM BOLT	12
I		60MM BOLT	2
J		40MM BOLT	2
K		WRENCH	1
L		ANTI-TIP	1
M		SHELF CLIP	4
N		KNOBS	2
O		KNOB SCREW	2

Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish.


Step 3

Remove Drawer from Top Assembly (A). Lay Top Assembly (A) upside down on a non abrasive surface. Attach Side Assembly (C) using 4-35MM Hex Bolts (H). **NOTE: Do not tighten firmly at this time.**

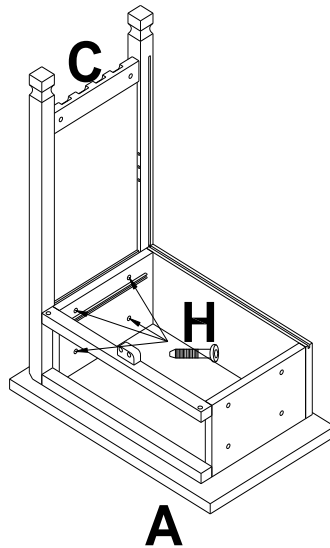


Step 4

Attach Side Assembly (B) using 4-35MM Hex Bolts (H). **NOTE: Do not tighten firmly at this time.** Align Back Panel (D) with grooves in Side Assemblies (C & B) - Slide Back Panel (D) in to place

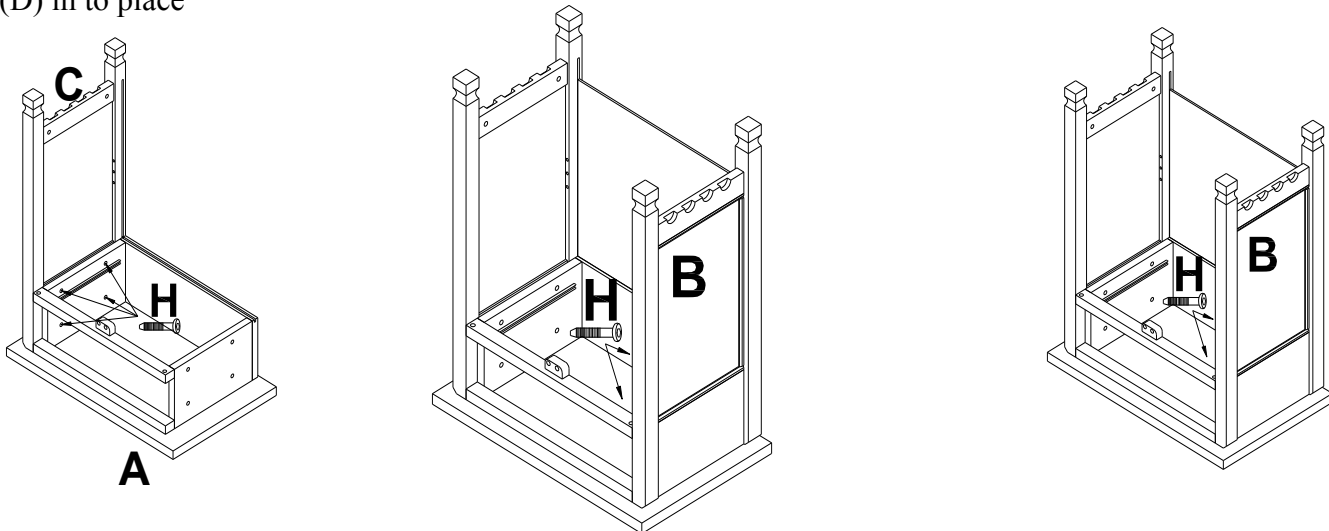


Step 5

Attach Bottom (E) to Side Assemblies (C & B) using 4-35MM Hex Bolts (H). **Note: TIGHTEN ALL BOLTS AT THIS TIME.** Attach wooden knob to outside of drawer front. Insert the Drawer in to the Top Assembly. Insert Shelf Clips (M) in to desired location. Place Adjustable Shelf (G) on Clips.

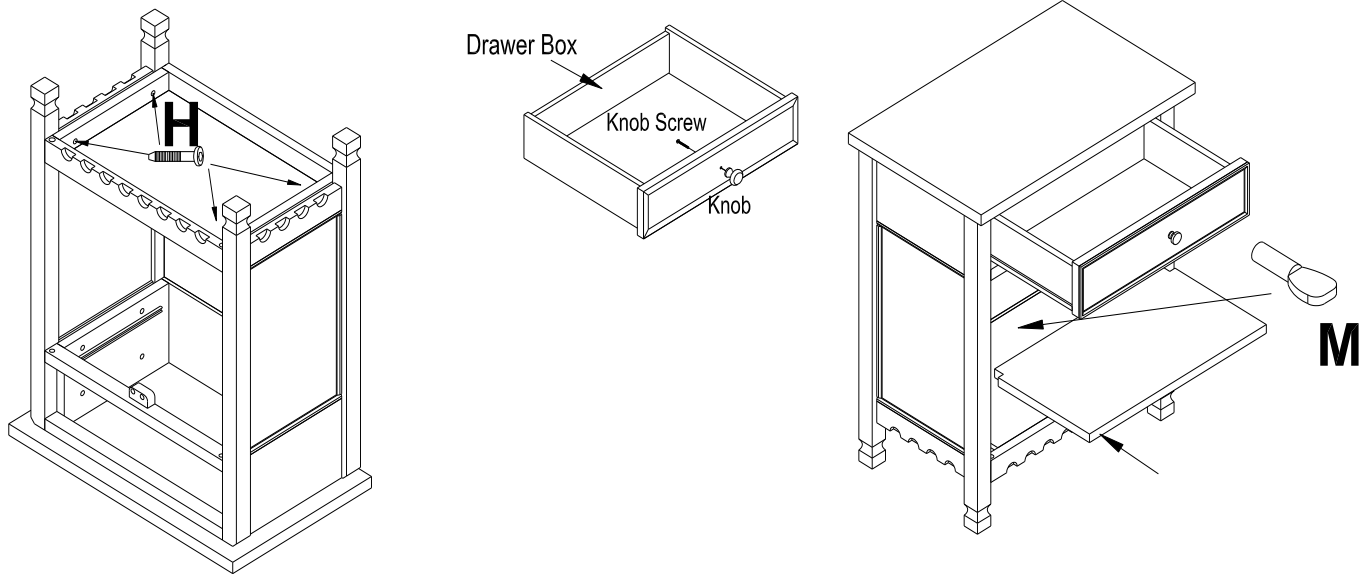

Step 6

Attach 2 Doors (F). Insert 40MM Bolt (J) in to threaded insert in underside of rail on Top Assembly. Align hole in top of Door (F) with 40MM Bolt (J). Thread 60MM Bolt (I) thru rail on Bottom Shelf. Align in to Hole on bottom side of Door (F). Repeat for second door. Attach Wood Pulls.

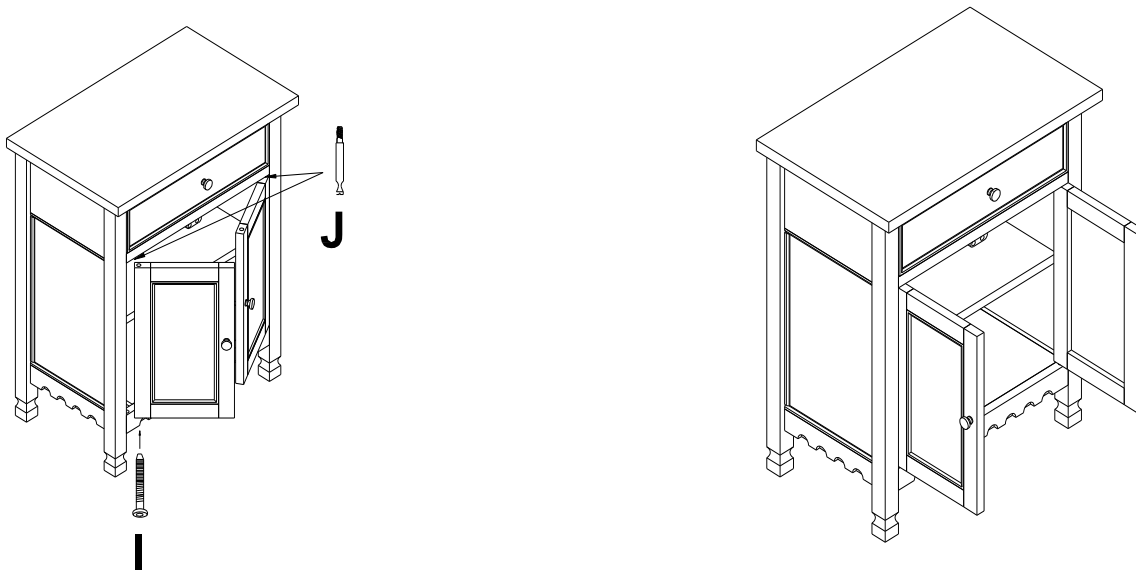

CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

REPLACEMENT PARTS:

For best service, to order replacement parts go to www.alaterrefurniture.com. Use the order form on the web site to order your replacement parts. **Thank You!**