


# ASSEMBLY INSTRUCTIONS





## Upholstered Chair

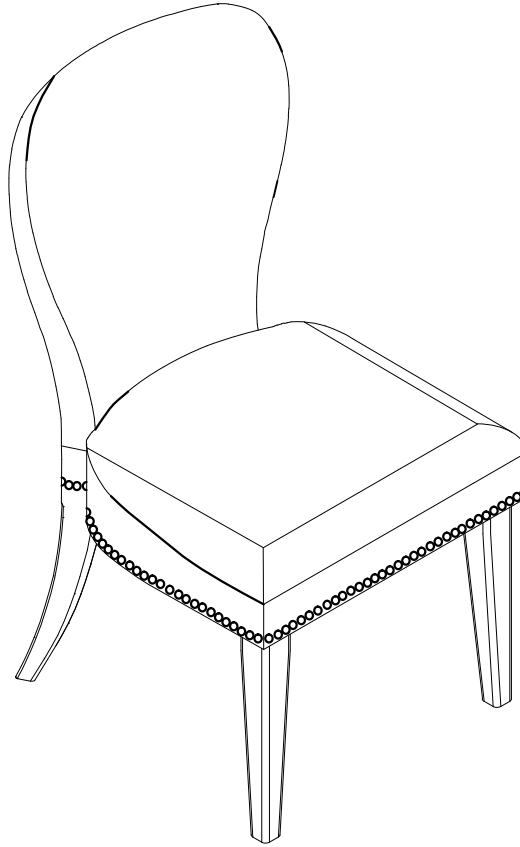


### REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.






Order replacement parts and hardware at "[boltonfurniture.com](http://boltonfurniture.com)"

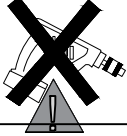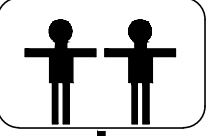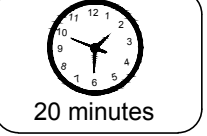 <p>. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!! . Please assemble on a clean soft surface to avoid damage.</p>	 +  20 minutes	<p><u>Tool Included</u></p> 
--	---	---


# Upholstered Chair

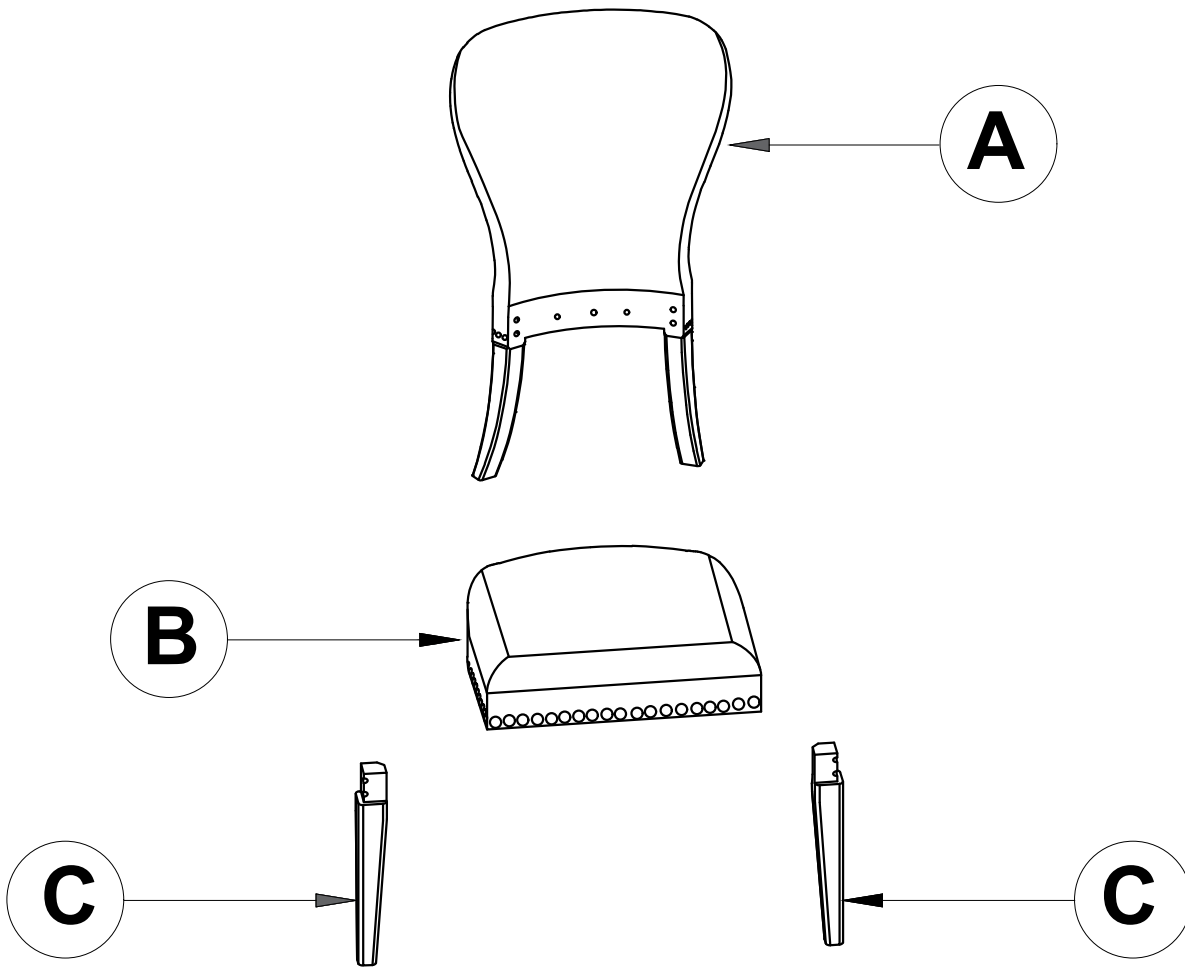



Identifying the hardware-Identify the hardware using the illustrations below.




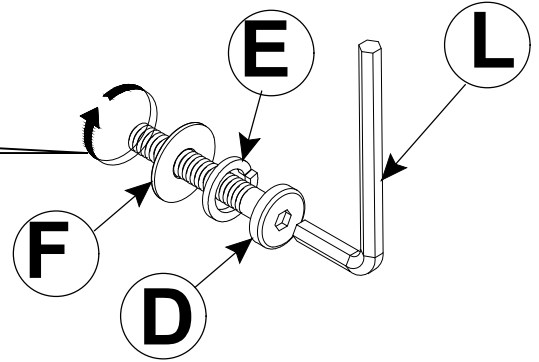
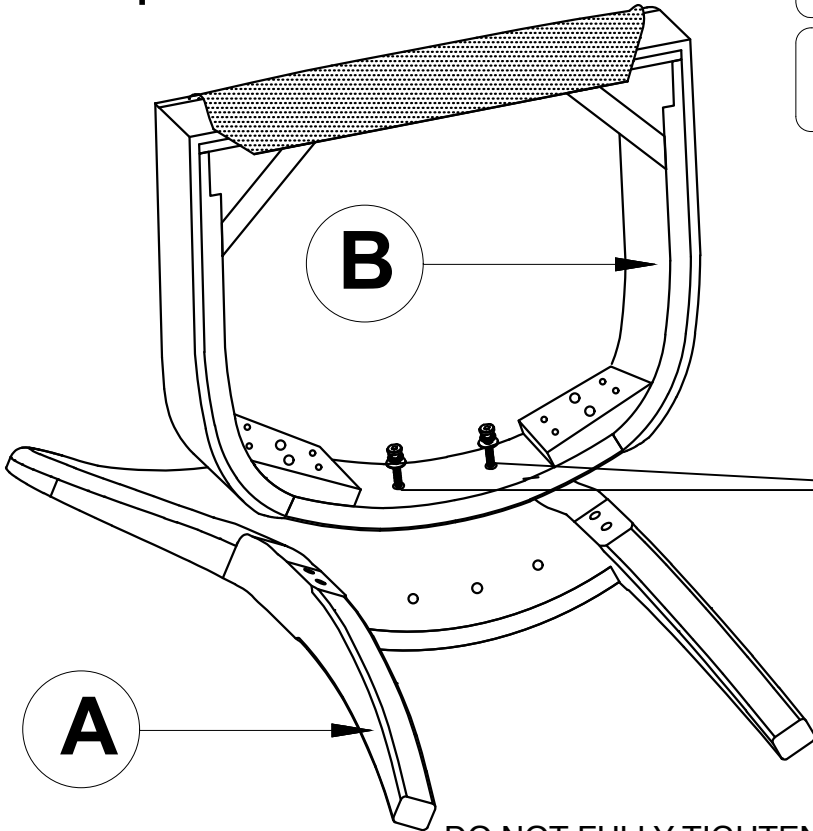
# Step 1

**D**  **02**  
1/4"x20x50 mm

**E**  **02**  
1/4"xØ10Dx1.5mm


**F**  **02**  
1/4"xØ16 Dx1.5mm


**L**  **01**  
ALLEN WRENCH





DO NOT FULLY TIGHTEN THE BOLTS



# Step 2

**G**  **04**  
5/16"x18x75 mm

**J**  **04**  
5/16"xØ11Dx1.5mm


**K**  **04**  
5/16"xØ19Dx1.5mm


**L**  **01**  
ALLEN WRENCH

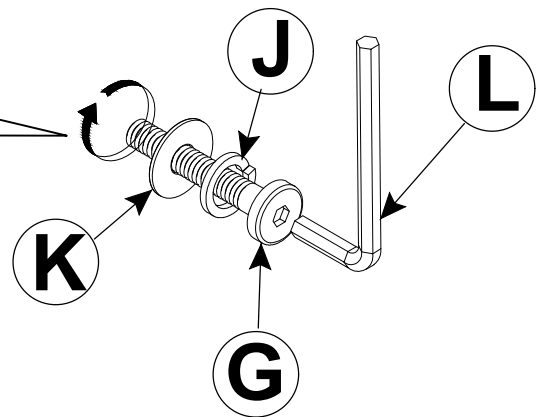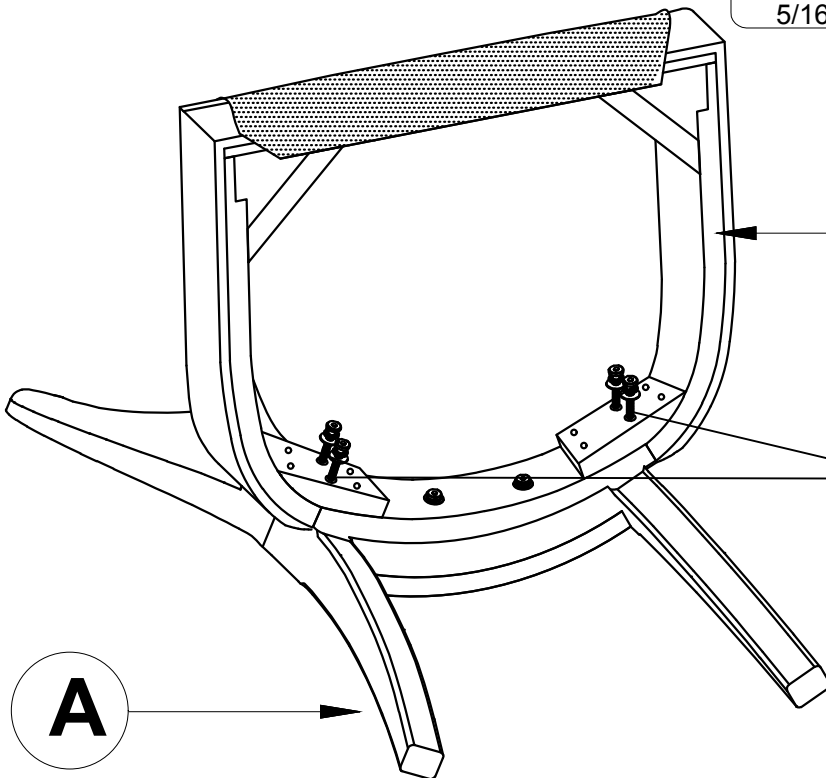


DO NOT FULLY TIGHTEN THE BOLTS


# Step 3

**H**  **04**  
5/16"x18x 65mm

**J**  **04**  
5/16"xØ11Dx1.5mm

**K**  **04**  
5/16"xØ19Dx1.5mm

**L**  **01**  
ALLEN WRENCH

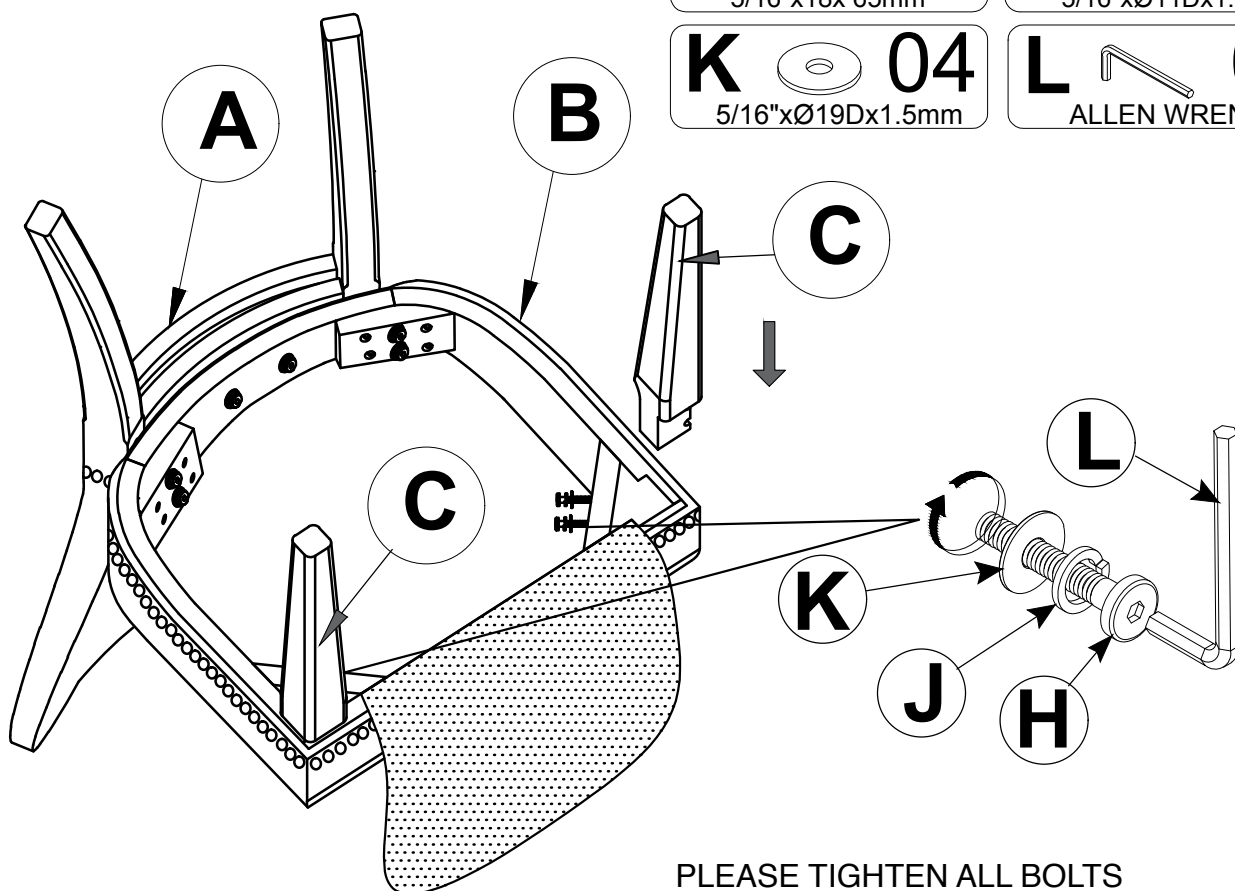

# Step 4

