
# Alaterre Furniture

# **Toilet Hutch with Open Storage**

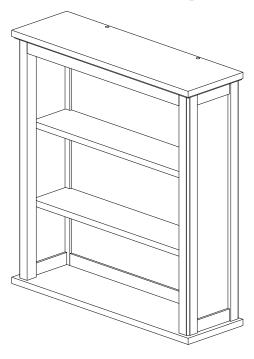

Thank you for purchasing the Toilet Hutch with Open Storage from ALATERRE FURNITURE. We have found it helpful to have a second person present during the assembly process.

# **Toilet Hutch with Open Storage Assembly Instructions**

# **Parts**

NO.	DRAWING	DESCRIPTION	QTY
A		TOILET HUTCH	1
В		SHELF	2
С		FRENCH CLEAT	1

NO.	DRAWING	DESCRIPTION	QTY
D	(a) <u>manananana</u>	M6x45MM BOLT	4
Е	hiiiiii.	4x40MM	4
F		SHELF CLIP	8
О		ALLEN KEY	1
I	Junis- Junis- Junis- Junis-	ANTI-TIP	1

# Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

# Step 2


Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish

# Step 3


Remove Table Top of Toilet Base by unscrewing 4 pre-installed Hex Bolts (D).

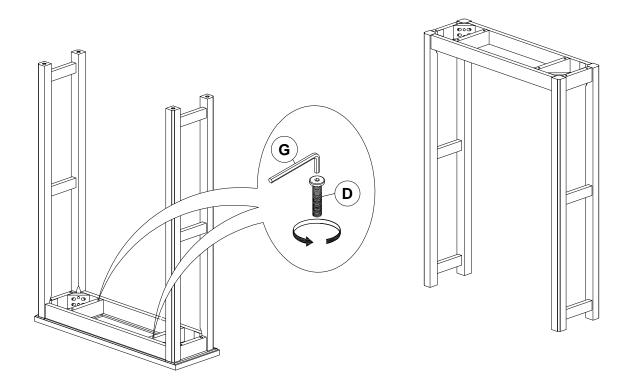

**Step 4**Insert 8-Shelf Clips (F) in Holes on Side Frames. Set Shelves (B) on Shelf Clips (F).

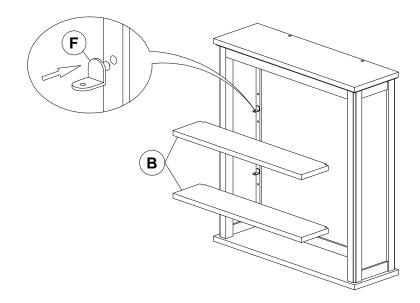

**Step 5**Attach Toilet Hutch (A) on Toilet Base using 4-M6x45MM Hex Bolts (D). NOTE: TIGHTEN ALL BOLTS AT THIS TIME!

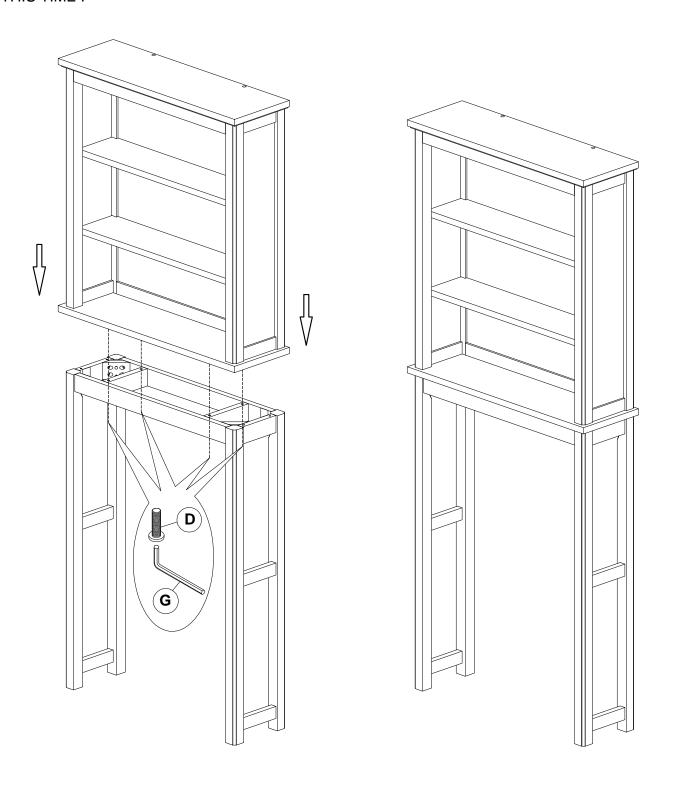

### **CARE**

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

#### **REPLACEMENT PARTS:**

For best service, to order replacement parts go to www.alaterrefurniture.com. Use the order form on the website to order your replacement parts. Thank You!

#### IF YOU WANT TO HANG ON THE WALL

### Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.


### Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish

# Step 3


Remove the French Cleat (C) from the back of the Toilet Hutch (A) by unscrewing 2 pre-installed Wood Screws (E). Locate studs behind drywall in desired location. Attach French Cleat (C) to Wall Studs in at least 2 locations with Wood Screws (E)

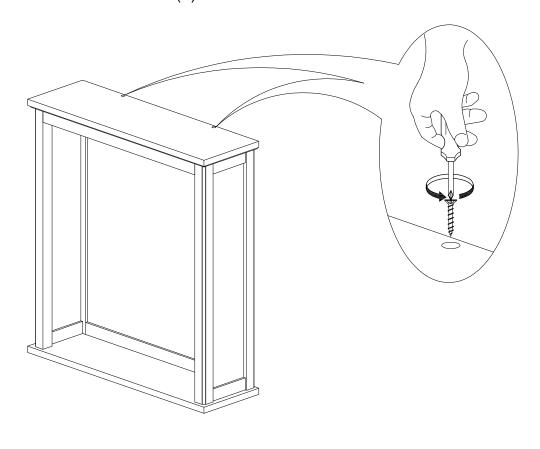

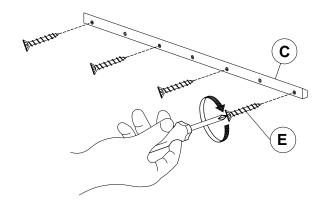


# Step 4

Insert 8-Shelf Clips (F) in Holes on Side Frames at desired location. Place Shelves (B) on Shelf Clips (F).

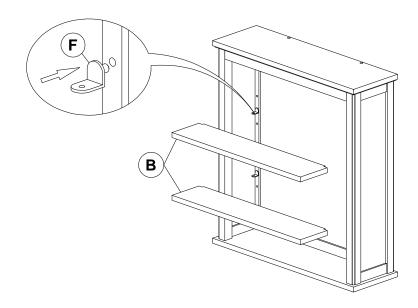

# Step 5

Set Toilet Hutch (A) on French Cleat (C). Secure Toilet hutch (A) to French Cleat (C) by installing 2

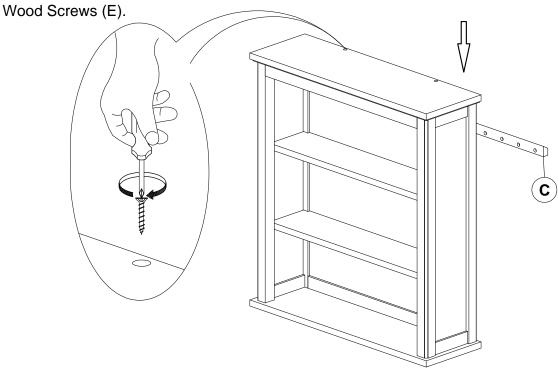

#### **CARE**

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

#### **REPLACEMENT PARTS:**

For best service, to order replacement parts go to www.alaterrefurniture.com. Use the order form on the website to order your replacement parts. Thank You!