


# Alaterre Furniture




## Bath 27"W x 29"H Wall Mounted Cabinet with Towel Rod

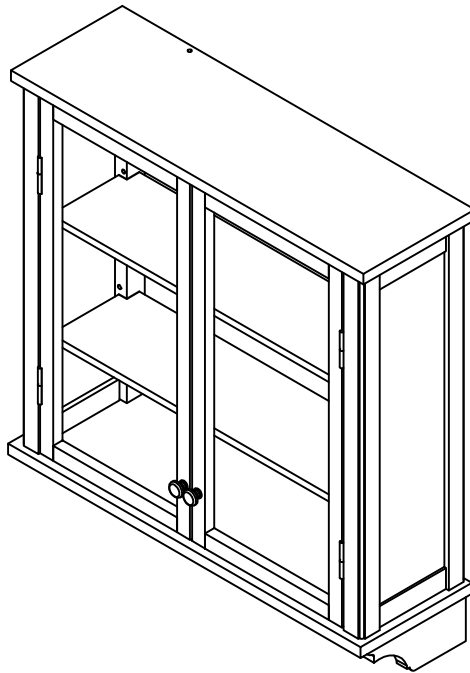



Thank you for purchasing the Bath 27"Wx29"H Wall Mounted Cabinet With Towel Rod from ALATERRE FURNITURE. We have found it helpful to have a second person present during the assembly process.

## Bath 27"W x 29"H Wall Mounted Cabinet with Towel Rod
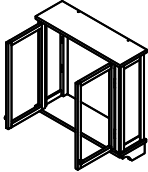
### Assembly Instructions Parts

NO.	DRAWING	DESCRIPTION	QTY
A		Bath Wall Mounted Cabinet	1
B		SHELF	2
C		FRENCH CLEAT	1

NO.	DRAWING	DESCRIPTION	QTY
D		SHELF CLIP	8
E		4x50MM	6
F		4x40MM	4
G		EZ-ANCHOR	4

# TO HANG ON WALL

---

## Step 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

---



## Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish


---

## Step 3

Remove the French Cleat (C) from the back of the Bath Wall Mounted Cabinet(A) by unscrewing 2 pre-installed Wood Screws (E) from the top of the cabinet. Locate studs behind drywall in desired location. Attach French Cleat (C) to Wall Studs in 4 locations with Wood Screws (E)

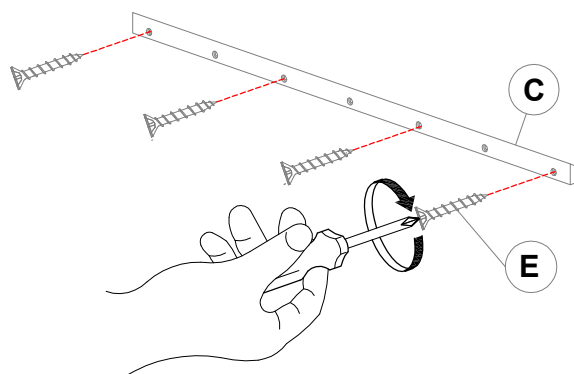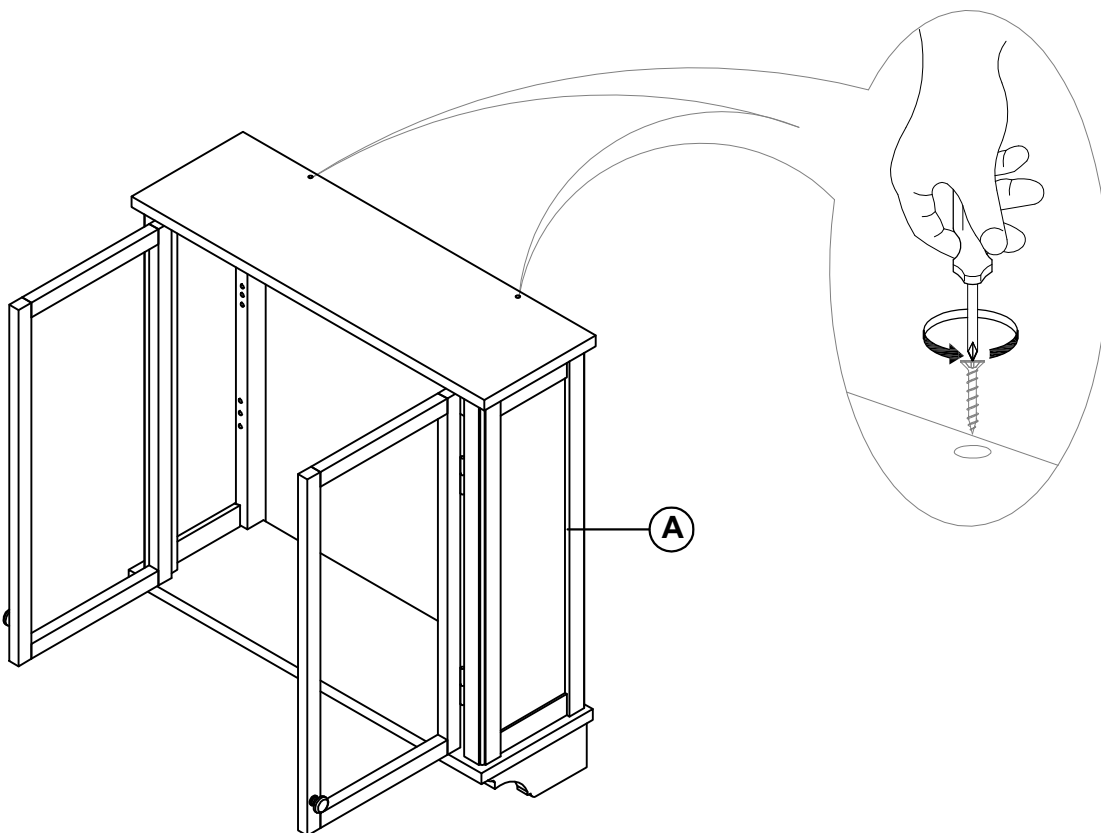


If hole locations do not align with stud in wall, install the EZ Anchor(G) in to drywall by tapping it in to the predrilled pilot holes up to the thread, and then screwing the EZ Anchor in to the drywall. Attach Cleat (C) using 4 wood screw (F) to EZ Anchors. NOTE: Cleat could be secured using combination of Studs and EZ Anchors.

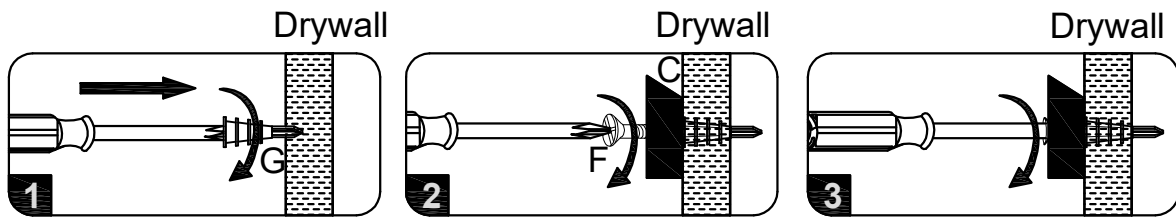


#### Step 4

Insert 8-Shelf Clips (D) in Holes on Side Frames at desired location. Place Shelves (B) on Shelf Clips (D).

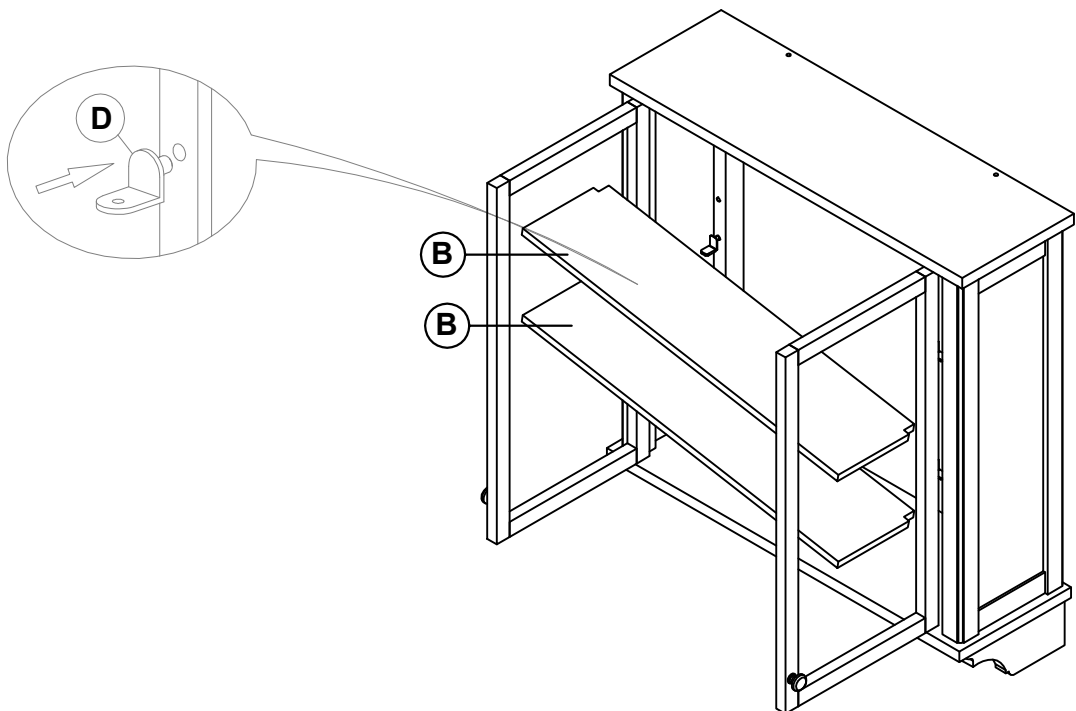

## Step 5

Set Bath Wall Mounted Cabinet(A) on French Cleat (C). Secure Bath Wall Mounted Cabinet (A) to French Cleat (C) by installing 2 Wood Screws (E).

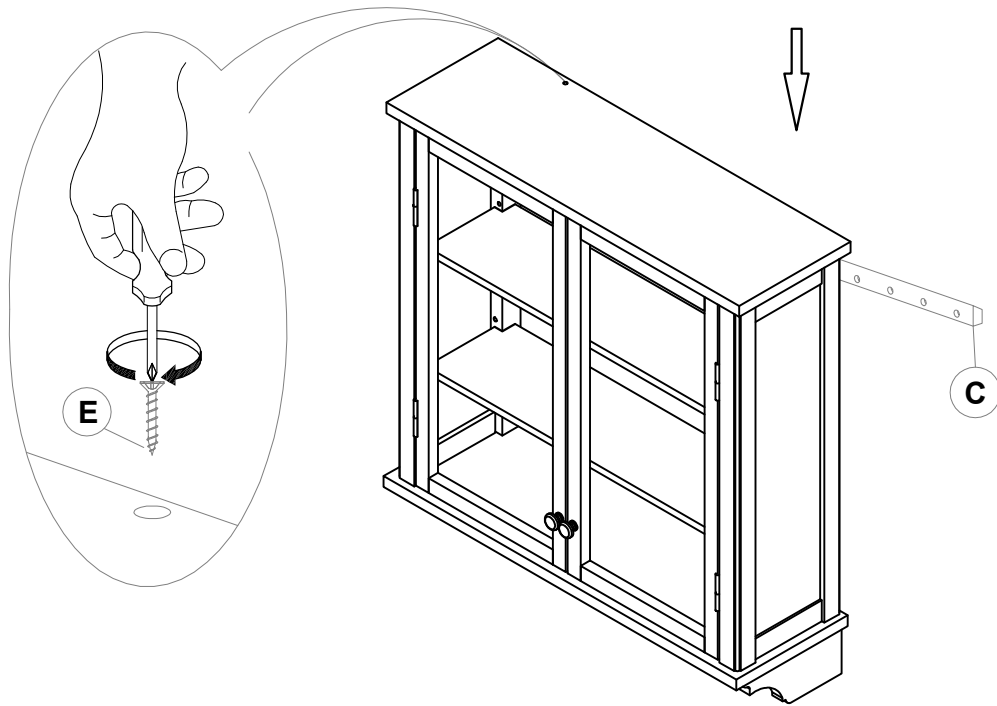

---

## CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

---

## REPLACEMENT PARTS:

For best service, to order replacement parts go to [www.alaterrefurniture.com](http://www.alaterrefurniture.com). Use the order form on the website to order your replacement parts. Thank You!