




## MOUNTING INSTRUCTIONS

NO.	DRAWING	DESCRIPTION	QTY.
A		MIRROR	1
B		PLASTIC ANCHOR	2
C		SCREW	2

**NOTE :** THIS MIRROR CAN BE HUNG VERTICALLY OR HORIZONTALLY.  
DETERMINE THE DESIRED DIRECTION YOU WANT THE MIRROR  
TO BE HUNG

### Step 1

MEASURE THE DISTANCE BETWEEN THE TWO HOLES OF THE KEY HOLE CENTER . MARK THE DESIRED LOCATION ON THE WALL WHERE YOU WANT TO HANG THE MIRROR.




### Step 2

DRILL A 1/8" PILOT HOLE 3/4" DEEP . THIS WILL MARKS THE LOCATION FOR THE SCREW THAT THE MIRROR WILL HANG FROM.

### Step 3


IF THE HOLE LOCATION IS ALIGNED WITH A STUD IN THE WALL , SECURE SCREW (C) DIRECTLY IN TO THE STUD .

**NOTE :** DO NOT DRIVE SCREW ALL THE WAY IN, KEEP HEAD OF SCREW OUT ABOUT 3/8"

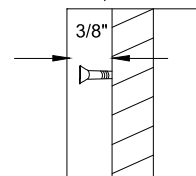

### Step 4


IF HOLE LOCATIONS DO NOT ALIGN WITH THE STUD IN WALL, INSTALL THE PLASTIC ANCHOR (B) . TAP THE PLASTIC ANCHOR (B) IN TO THE DRYWALL.

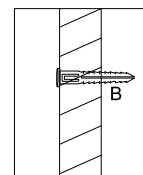

### Step 5

SECURE SCREWS INTO PLASTIC ANCHOR

**NOTE :** DO NOT DRIVE SCREW ALL THE WAY IN , HAVE HEAD OF SCREW OUT ABOUT 3/8"

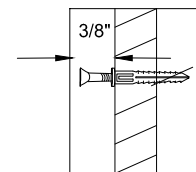

STEP 6 : HANG MIRROR.

