


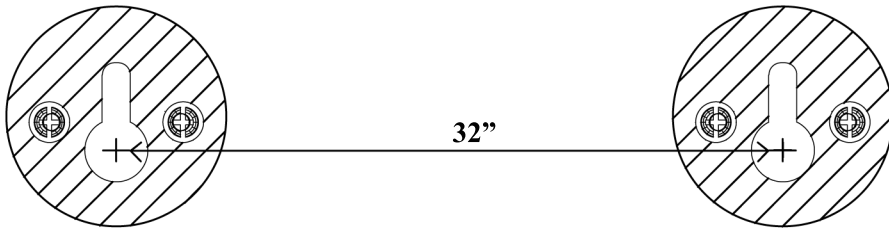


## MOUNTING INSTRUCTIONS

NO.	DRAWING	DESCRIPTION	QTY.
A		COAT HOOK	1
B		PLASTIC ANCHOR	2
C		SCREW	2

### Step 1

MEASURE THE DISTANCE BETWEEN THE TWO HOLES OF THE KEY HOLE CENTER . MARK THE DESIRED LOCATION ON THE WALL WHERE YOU WANT TO HANG THE COAT HOOK.




### Step 2

DRILL A 1/8" PILOT HOLE 3/4" DEEP . THIS WILL MARKS THEN LOCATION FOR THE SCREW THAT THE COAT HOOK WILL HANG FROM.

### Step 3


IF HOLE LOCATION IS ALIGNED WITH A STUD IN WALL , SECURE SCREW ( C ) DIRECTLY IN TO THE STUD .

NOTE : DO NOT DRIVE SCREW ALL THE WAY IN, KEEP HEAD OF SCREW OUT ABOUT 3/8"

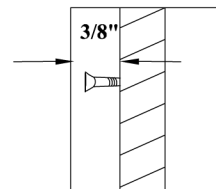

### Step 4


IF HOLE LOCATIONS DO NOT ALIGN WITH THE STUD IN WALL , INSTALL THE PLASTIC ANCHOR ( B ) . TAP THE PLASTIC ANCHOR IN TO THE DRYWALL .

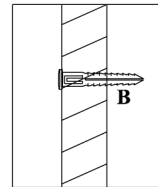

### Step 5

SECURE SCREWS INTO PLASTIC ANCHOR

NOTE : DO NOT DRIVE SCREW ALL THE WAY IN , HAVE HEAD OF SCREW OUT ABOUT 3/8"

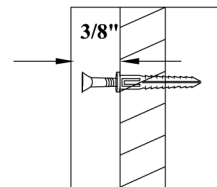

STEP 6 : HANG COAT HOOK

