




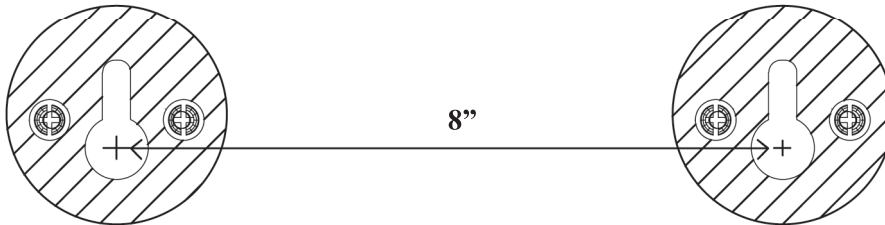
MOUNTING INSTRUCTIONS

NO.	DRAWING	DESCRIPTION	QTY.
A		KEY HOLDER	1
B		PLASTIC ANCHOR	2
C		SCREW	2

NOTE : THIS KEY HOLDER CAN BE HUNG VERTICALLY OR HORIZONTALLY.
DETERMINE THE DESIRED DIRECTION YOU WANT THE KEY HOLDER
TO BE HUNG

Step 1

MEASURE THE DISTANCE BETWEEN THE TWO HOLES OF THE KEY
HOLE CENTER . MARK THE DESIRED LOCATION ON THE WALL WHERE
YOU WANT TO HANG THE KEY HOLDER




Step 2

DRILL A 1/8" PILOT HOLE 3/4" DEEP . THIS WILL MARKS THE LOCATION FOR
THE SCREW THAT THE KEY HOLDER WILL HANG FROM.

Step 3


IF THE HOLE LOCATION IS ALIGNED WITH A STUD IN THE WALL , SECURE
SCREW (C) DIRECTLY IN TO THE STUD .

NOTE : DO NOT DRIVE SCREW ALL THE WAY IN,
KEEP HEAD OF SCREW OUT ABOUT 3/8"

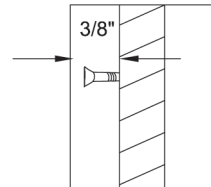

Step 4


IF HOLE LOCATIONS DO NOT ALIGN WITH THE STUD IN WALL . INSTALL
THE PLASTIC ANCHOR (B) . TAP THE PLASTIC ANCHOR INTO THE
DRYWALL .

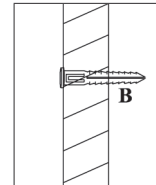

Step 5

SECURE SCREWS INTO PLASTIC ANCHOR

NOTE : DO NOT DRIVE SCREW ALL THE WAY IN , HAVE HEAD OF
SCREW OUT ABOUT 3/8"

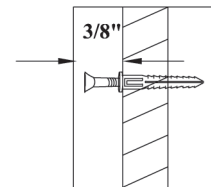

STEP 6 : HANG KEY HOLDER

